

# **User instructions ClimaRad Vita H1C-S**

# Operating principle ClimaRad Vita H1C-S

Installing and using the ClimaRad Vita H1C-S unit ensures optimum air quality and temperature. This unit heats, cools and ventilates in combination with air filtration and heat recovery. The built-in heat exchanger ensures that hardly any heat is lost during ventilation with outside air.





ClimaRad Vita H1C-S

# Operating the ClimaRad Vita H1C-S

The control panel is located on the top of the device.



#### Control panel

The ClimaRad Vita H1C-S in your room is adjusted optimally by the installer and works completely automatically. This is why we will only explain the function buttons that are relevant for you in daily use.



## **Function Keys**





Automatic control. The ventilation/heating/cooling in the room is controlled automatically by your ClimaRad ventilation unit, which works based on CO<sub>2</sub> measurement.

### **AUTO**





Use the AUTO + or AUTO - button combinations to set the desired default temperature of your room. This will temporarily disable the automatic control. After a period of 4 hours your ClimaRad will switch back to automatic control.





You can adjust the desired speed for heating or cooling with the + and the - on your control panel.



<u>Pause.</u> Use this function when you temporarily do not wish to ventilate/heat/cool. After a period of 4 hours your ClimaRad will switch back to automatic control.



<u>Maximum.</u> Your ClimaRad will function in the maximum setting. For ventilation, this function can be used to expel unpleasant odours such as smoke or cooking smells. After a period of 4 hours your ClimaRad will switch back to automatic control.



Ventilation with cooler outside air. Your ClimaRad ventilates with outside air when it is a minimum of 2 degrees colder than the air in your room. After a period of 8 hours your ClimaRad will switch back to automatic control. You can control the speed with the + and - . For example, use this function in the summer when you want to lower the temperature in your warmed room by several degrees.







<u>Child lock.</u> This button combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. Repeat this action if you want to unlock the control panel.

Messages		Switch off
	Child lock. The child lock is activated.	Press 4 seconds simultaneously
×	Error. A fault has occurred. Please contact your installer or housing corporation.	
filter vervuild	<u>Dirty filter.</u> Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds.	Press for 6 seconds