


## User instructions ClimaRad S-Fan

### Operation of the ClimaRad S-Fan

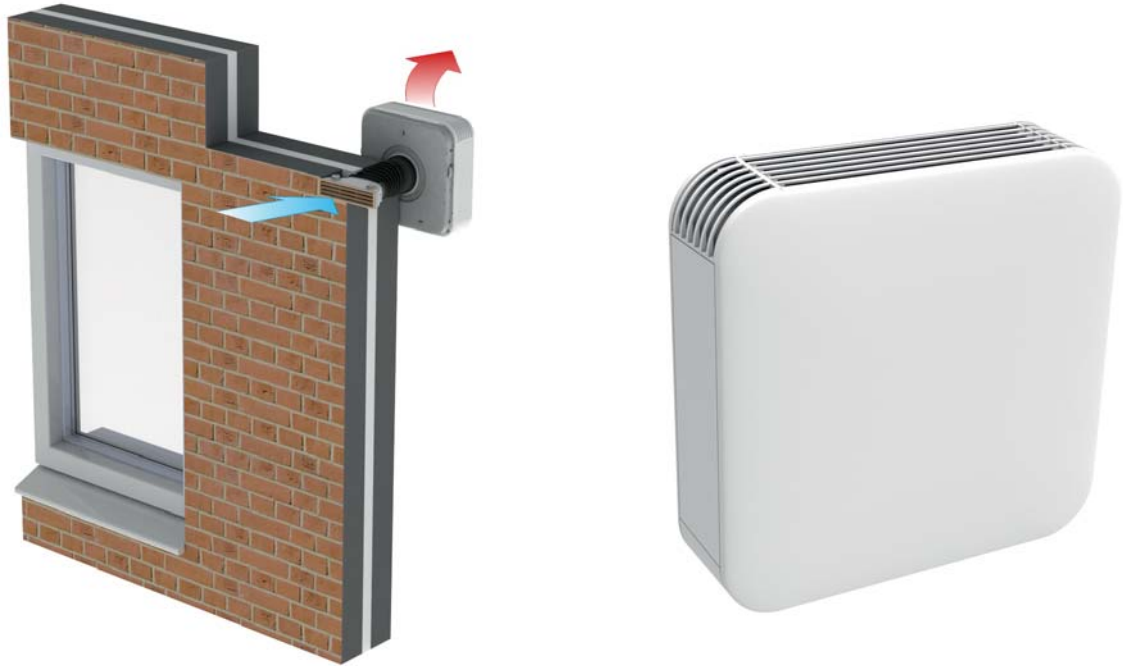

 Please note! The air supply opening must always remain open and unimpeded!

### Operation ClimaRad S-Fan

The ClimaRad S-Fan can be operated by using the control panel on the underside of the device.



Control panel

## Function keys

### AUTO



Automatic control. The room ventilation is controlled automatically by your ClimaRad S-Fan, which ventilates on the basis of CO<sub>2</sub> and RH measurements.



Manual: manual ventilation using outside air:

You can set your desired ventilation speed with the + and - keys on the control panel. After a period of 8 hours, the ClimaRad S-Fan will switch back to the automatic setting. Use this function for example when you want to lower the temperature in your bedroom by a few degrees at night in the summer (summer night ventilation).



Pause/Off. Use this function if you (temporarily) do not want to ventilate. After a period of 4 hours, the ClimaRad S-Fan switches back to the automatic setting. When the button is pressed for 5 seconds, the unit switches off. In case of emergencies you can use this function to switch off the device.



No function.



No function.



Child lock. The child lock will be activated when you press and hold the three buttons on the panel for 4 seconds.

## Messages

## Switch off



Child lock. The child lock is switched on. Press and hold the three buttons for 4 seconds to switch it off.



Press 4 seconds simultaneously



Malfunction. A malfunction has occurred. Contact your technician or housing corporation.

filter vervuild

Dirty Filter. Replace the air filter or contact your technician or housing corporation. After replacement, press and hold the + and - buttons for 6 seconds.



Press for 6 seconds



Pairing. The ClimaRad S-Fan can be linked to other ClimaRad products. Press the buttons briefly and simultaneously.



Press briefly and simultaneously