
*Clima*Rad[®]

User instructions ClimaRad Ventura V1C

Operating principle ClimaRad Ventura V1C

The ClimaRad Ventura V1C is equipped with sensors for CO_2 , humidity, indoor and outdoor temperature. They measure the air quality and automatically determine the required ventilation for each room. The device also features convectors, allowing the unit to ventilate, heat and (optionally) cool.

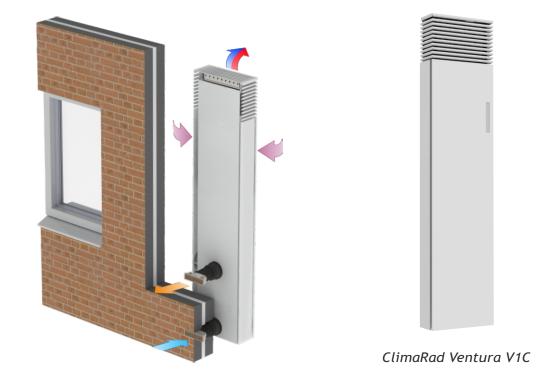

Operating the ClimaRad Ventura V1C

The control panel is situated on the front of the device. You can find the function buttons and notifications of the panel in question on page 2 of this instruction manual.

The ClimaRad Ventura V1C in your room is optimally configured by the installer and functions fully automatically. That is why we only explain the function buttons that are relevant for you during daily use.

Operating the ClimaRad Round



You can set the desired temperature yourself by turning the ring. Turn left for lower temperatures, turn right for higher temperatures.

	Function Keys		
F M I A X I U E A R R I I I I I I I I I I I I I	AUTO	<u>Automatic control</u> : The ventilation, heating ar room are automatically controlled by your Clin functions based on CO ₂ measurements and ten	maRad Ventura, which
• •		<u>Temperature</u> : You can set the desired temperature yourself using the + and - on your control panel in order to heat up or optionally cool down the room.	
		<u>Pause</u> : Use this function if you want to stop ventilating temporarily. After a period of 4 hours, your ventilation unit will reset to automatic control.	
		<u>Ventilation (manual)</u> : This function allows you to activate the ventilation function of your device. You can then use the + and - on your control panel to configure the ventilation speed. After a period of 8 hours, your device will reset to automatic control.	
		<u>Child lock</u> : This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. If you want to unlock the device, repeat this action.	
ClimaRad Ventura VIC			
Message	S		Switch off
Child lock: The ch		nild lock is activated.	Press 4 seconds simultaneously
×	Error: A fault has occurred. Please contact your installer or housing corporation.		
		ce the air filters or contact your installer or on After replacing the filters, press the + and - onds.	Press for 6 seconds
Function keys installer/property manager			

Turn cooling function off/on: Only applicable for system with cooling system. You switch it on or off by pressing the button for 5 sec.