Clima Rad<sup>®</sup>

## **User instructions ClimaRad Ventura V1C-S**

## Operating principle ClimaRad Ventura V1C-S

The ClimaRad Ventura V1C-S is fitted with sensors for  $CO_2$ , humidity, indoor and outdoor temperature. These measure the air quality and determine the ventilation needed per room automatically. The device is fitted with convectors which enable the unit to ventilate, heat and cool (if needed).



## Operating the ClimaRad Ventura V1C-S

The control panel is situated on the front of the device. You can find the function buttons and notifications of the panel in question on page 2 of this instruction manual.

The ClimaRad Ventura V1C-S in your room is optimally configured by the installer and functions fully automatically. That is why we only explain the function buttons that are relevant for you during daily use.

	Functietoetsen			
		A U T O	<u>Automatic control</u> : The ventilation, heating an room are automatically controlled by your Clin functions based on CO <sub>2</sub> measurements and ten	maRad Ventura, which
• •		(+)	You can adjust the desired speed for heating on the structure of the second sec	or cooling with the + and
AUTO			<u>Pause</u> : Use this function if you want to stop ventilating temporarily. After a period of 4 hours, your ventilation unit will reset to automatic control.	
страница о с с с с с с с с с с с с с с с с с с с			<u>Maximum.</u> Your ClimaRad will function in the maximum setting. For ventilation, this function can be used to expel unpleasant odours such as smoke or cooking smells. After a period of 4 hours your ClimaRad will switch back to automatic control.	
			No function.	
ClimaRad Ventura VTC-S			<u>Child lock</u> : This key combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. If you want to unlock the device, repeat this action.	
Clin				
Message	s			Switch off
<u>Child lock</u> : The ch		<u>Child lock</u> : The chi	ild lock is activated.	Press 4 seconds simultaneously
Error: A fault has occurred. Please contact your i housing corporation.				
(filter vervuild)			te the air filters or contact your installer or on After replacing the filters, press the + and - nds.	Press for 6 seconds