

User instructions ClimaRad Care H1C-S

Operating principle ClimaRad Care H1C-S

The ClimaRad Care H1C-S device creates the optimum temperature and air quality by heating, cooling, and ventilating with air filtration and heat reclamation. The built-in heat exchanger ensures that hardly any heat is lost during ventilation with outside air.





ClimaRad Care H1C-S

Operating the ClimaRad Care H1C-S

The control panel is located on the top of the device.



Control panel

The ClimaRad Care H1C-S in your room is adjusted optimally by the installer and works completely automatically. This is why we will only explain the function buttons that are relevant for you in daily use.



Function Keys





Automatic control. The ventilation/heating/cooling in the room is controlled automatically by your ClimaRad ventilation unit, which works based on CO₂ measurement.

AUTO





Use the AUTO + or AUTO - button combinations to set the desired default temperature of your room. This will temporarily disable the automatic control. After a period of 4 hours your ClimaRad will switch back to automatic control.





You can adjust the desired speed for heating or cooling with the + and the - on your control panel.



<u>Pause.</u> Use this function when you temporarily do not wish to ventilate/heat/cool. After a period of 4 hours your ClimaRad will switch back to automatic control.



<u>Maximum.</u> Your ClimaRad will function in the maximum setting. For ventilation, this function can be used to expel unpleasant odours such as smoke or cooking smells. After a period of 4 hours your ClimaRad will switch back to automatic control.



Ventilation with cooler outside air. Your ClimaRad ventilates with outside air when it is a minimum of 2 degrees colder than the air in your room. After a period of 8 hours your ClimaRad will switch back to automatic control. You can control the speed with the + and - . For example, use this function in the summer when you want to lower the temperature in your warmed room by several degrees.







<u>Child lock.</u> This button combination locks your control panel. Press the indicated buttons simultaneously for 4 seconds. Repeat this action if you want to unlock the control panel.

Messages		Switch off
	Child lock. The child lock is activated.	Press 4 seconds simultaneously
×	<u>Error.</u> A fault has occurred. Please contact your installer or housing corporation.	
filter vervuild	<u>Dirty filter.</u> Replace the air filters or contact your installer or housing corporation After replacing the filters, press the + and - buttons for 6 seconds.	Press for 6 seconds